

## TASKI R2-plus

### Hygienic hard surface cleaner - concentrate

#### Description

Multi-surface hygienic cleaner concentrate for use with the JohnsonDiversey Divermite dispenser

#### Key properties

- Formulated for the hygienic cleaning of telephones and other hard, water-resistant surfaces
- Slightly alkaline
- Non-abrasive
- Pleasant, fresh Room Care fragrance

#### Benefits

- Leaves surfaces hygienically clean
- Quickly and gently removes oily and water-soluble residues
- Regular use hinders lime scale build-up
- Colour and alphanumeric codes to prevent application mistakes
- Leaves a pleasant fragrance

#### Use instructions

##### Dosage:

Two doses into 300ml water-filled Divermite R2 bottle (10% in-use solution).

##### Directions for use:

Remove the spray trigger from the Divermite R2 bottle and fill with clean, fresh water to the fill level mark indicated on the bottle (300ml). Push the Divermite R2 dispenser button twice to add product. Securely screw-on the spray trigger, ensure the nozzle is closed, and shake gently to mix.

Bucket application: Dose the required amount of Taski R2 Plus into the dispenser ladle and pour the ladle's content into water.

##### Application:

Small areas: Spray a small quantity onto a damp cloth/sponge pad and clean the surface. Rinse with fresh water or wipe with a clean, damp cloth. Buff with a dry cloth for extra shine.


Large surfaces (wet cleaning): Per 5 L water, dilute 1 push from the Divermite R2 dispenser into a bucket. Use a sponge, cloth or mop to apply the solution and to clean the surface.

Floor: Rinse with clean water or wipe with a damp (rinsed in clean water and wrung) cloth or mop. Buff with a dry cloth/mop for extra shine.

##### Important:

Test material compatibility in a small, inconspicuous place before use. Do not use with other dilution systems or methods. Do not use undiluted.

# R2-plus

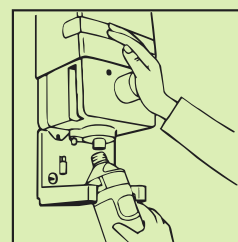

## **TASKI R2-plus**

### **Technical data**

- Appearance: clear, dark green liquid
- Relative density [20°C]: 1.032
- pH-value neat: 12.5 – 13.0
- pH-value in use: 12.0 +/- 0.5 at 10% dilution

The above data is typical of normal production and should not be taken as a specification.

### **Safe handling and storage information**

#### **Safe handling:**

Rinse and dry hands after use. The use of a skin reconditioning cream, such as Softcare Derasoft, may be beneficial. For prolonged contact, protection for the skin may be necessary.

Full guidance on the handling and disposal of this product is provided in a separate Material Safety Data Sheet. Only for professional users / specialists.

#### **Storage Information:**

Store in original closed containers away from extremes of temperature.

### **Environmental information**

The surfactants used in this product are biodegradable in compliance with the requirement of EC Directives 73/404/EEC and 73/405/EEC and their subsequent amendments.

### **Available pack sizes**

Pack Size

2 x 1.5L

### **Diversey Eastern and Central Africa Ltd**

Kaptagat Road, Loresho

P.O Box 41939 00100 Nairobi

Tel: +254 20 4224000 / 3008000

Fax: +254(20)4224888 / 4180481

[www.diversey.com](http://www.diversey.com)